

REAR WHEEL/BRAKE/SUSPENSION/FINAL DRIVE

BREATHER HOLE CLEANING


Blow through the breather hole with compressed air.

PINION GEAR ASSEMBLY


Install the original pinion gear spacer.

NOTE

When the gear set, pinion bearing and/ or gear case has been replaced, use a 2.00 mm (0.079 in) thickness spacer.

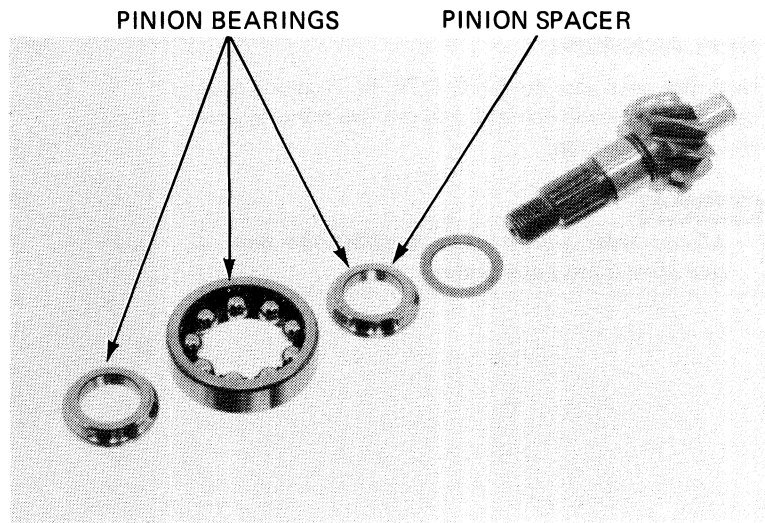

Press the bearing onto the pinion gear shaft with the special tools shown.

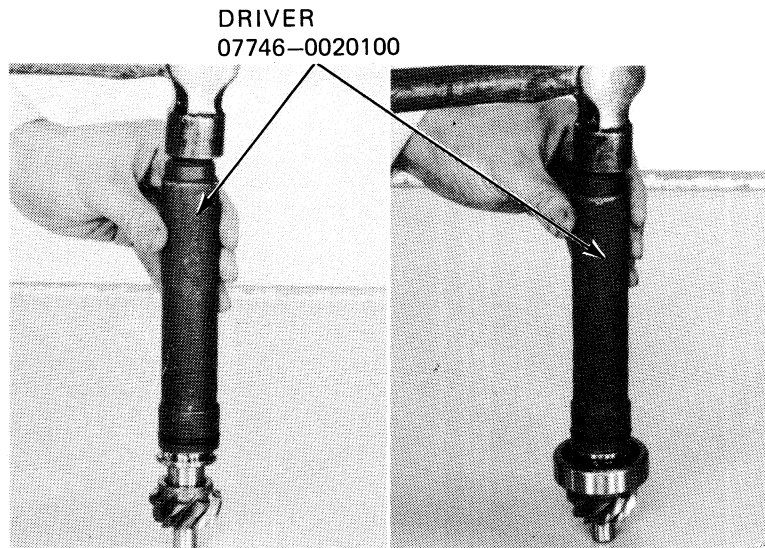

Place the pinion assembly into the gear housing.
Drive the pinion assembly into the gear case.

