

SEAT/REAR FENDER

REMOVAL

Remove the seat and rear fender by pulling the lever.

INSTALLATION

Install the seat and rear fender in the reverse order of removal.

