

If the Anti-Theft Alarm System Does Not Operate Properly

If any of the following situations arise, the battery (▶ P. 76) in the motorcycle may be discharged or there is a system problem. Remove the battery and see your dealer.

The alarm does not ring.
The alarm rings but fades out.
The alarm system does not stop.

- 7 Press the alarm button to select from 3 sensitivity levels.
 - 3 alarm rings: high sensitivity
 - 2 alarm rings: middle sensitivity
 - 1 alarm ring: low sensitivityThe Honda SMART Key indicator and ignition switch ring come on while setting.
- 8 Wait for about 10 seconds until the ignition switch ring starts blinking. The sensitivity level is set.
- 9 Remove the EM mode coupler from the EM mode connector to finish setting.
 - ▶ The sensitivity level is also set if you remove the EM mode coupler before the ignition switch ring starts blinking.
- 10 Store the EM mode coupler on the battery cover. Reinstall the parts in reverse order.