


Display Setting

You can adjust the two settings.

- Clock setting
- Changing of mileage unit

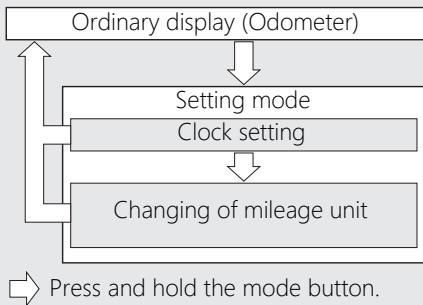

The established setting can also be set by turning the ignition switch to the OFF position.

The control is automatically switched from the setting mode to the ordinary display if the button is not pressed for about 30 seconds. Even in this case, the established setting is maintained.