

Troubleshooting

Engine Will Not Start	P. 102	Battery Goes Dead.....	P. 117
Warning Indicators On or Flashing	P. 103	Burned-out Light Bulb	P. 117
PGM-FI (Programmed Fuel Injection)		Blown Fuse.....	P. 119
Malfunction Indicator Lamp (MIL).....	P. 103	Unstable Engine Operation Occurs	
ABS (Anti-lock Brake System) Indicator	P. 104	Intermittently	P. 120
Honda SMART Key Indicator.....	P. 105		
Other Warning Indications	P. 106		
Fuel Gauge Failure Indication.....	P. 106		
When the Honda SMART Key System Does Not			
Operate Properly	P. 107		
Unlock the Ignition Switch in an			
Emergency	P. 109		
Tire Puncture	P. 112		
Electrical Trouble	P. 117		