


Rear Wheel

Removal

CB1100CA

1. Support your motorcycle securely and raise the rear wheel off the ground using the center stand or a hoist.
2. Loosen the rear axle nut and turn adjusting bolts so the rear wheel can be moved all the way forward for maximum drive chain slack.
3. Remove the rear axle nut.

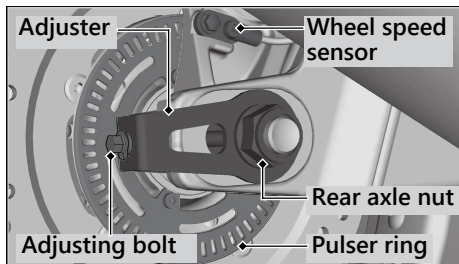

4. Remove the drive chain from the driven sprocket by pushing the rear wheel forward.
5. Remove the rear axle shaft.

