

Gauges, Indicators & Displays

Changing the Speed and Mileage Unit


The speedometer can display “mph” or “km/h”.

The odometer/tripmeter can also display “mile” or “km”.

1. Turn the ignition switch ON.
2. Select the brightness of the display (page 30).
3. Adjust the time (page 31).
4. The unit you are setting in the multi-function display start flashing.
5. Push the RESET button (1) to select “mile”/“mph” or “km”/“km/h”.
6. To end the selection and proceed to change the temperature unit (page 35), push the SET button (2).

- To end the selection, push and hold both the SET and RESET button for more than 2 seconds or turn the ignition switch OFF.

The display will stop flashing automatically and the selection will be cancelled if the button is not pushed for about 30 seconds.

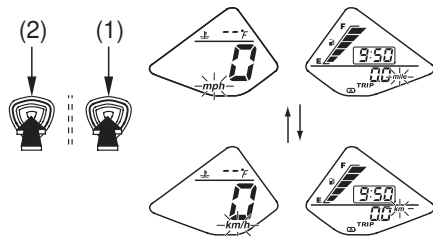

(1) RESET button (2) SET button