

Seat Removal


Refer to *Safety Precautions* on page 78 .

The front seat must be removed to remove the left side cover and to maintain the battery and fuses.

Front Seat Removal

To remove the front seat (1), remove the rear seat (page 94) and the bolt (2), and then pull the seat back and up.

To install the front seat, insert the prongs (3) into the front seat stays (4) and tighten the bolt securely.

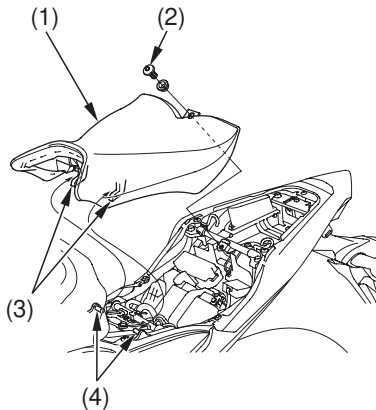

(1) front seat

(2) bolt

(3) prongs

(4) front seat stays