

Left Side Cover Removal

Refer to *Safety Precautions* on page 78 .

The left side cover must be removed to service the air cleaner and crankcase breather.


Removal

1. Remove the rear seat and front seat (pages 94 , 95).
2. Remove the bolt (1).
3. Pull the prongs (2) out from the grommets (3), then remove the side cover (4).

Installation

1. Position the cover so that the prongs are aligned with the grommets.
2. Push the prongs in.
3. Install the bolt.
4. Install the front seat and rear seat.

LEFT SIDE

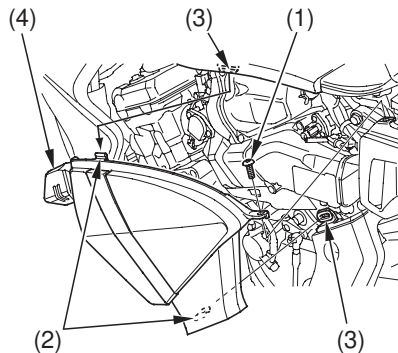

- | | |
|------------|----------------|
| (1) bolt | (3) grommets |
| (2) prongs | (4) side cover |