


Inspecting & Changing Air Cleaner Element

Use a new Honda Genuine air cleaner element or equivalent specified for your model.

NOTICE

Using the wrong air cleaner element can result in serious damage to the engine.

1. Remove the rear seat and front seat.
▶ P. 55, 56
2. Remove the left side cover. ▶ P. 57
3. Remove the screw, bolt and air cleaner cover.

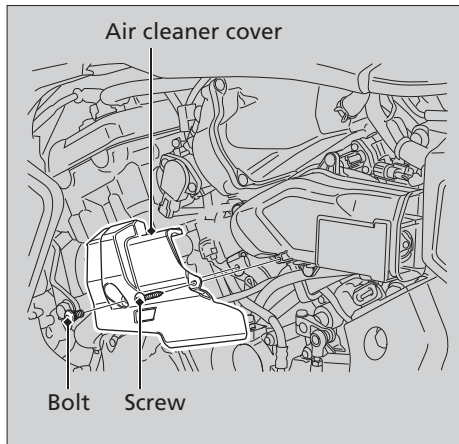

4. Remove the screws and air cleaner housing cover.