

## Setting Mode

### 1 Backlight brightness adjustment:

You can adjust the brightness to one of three levels.

- !a Turn the ignition switch to ON.
- !b Press and hold RESET button and SET button until the backlight brightness adjustment.
- !c Press RESET button. The brightness is switched.
  - 3 is maximum level.
  - 2 is middle level.
  - 1 is minimum level.
- !d Press SET button. The backlight is set, and then the display moves to the clock setting.

### 2 Clock setting:

- !a Press RESET button until the desired hour is displayed.
  - ▶ Press and hold RESET button to advance the hour fast.



- !b Press SET button. The minute digits start flashing.



- !c Press RESET button until the desired minute is displayed.
  - ▶ Press and hold RESET button to advance the minute fast.



- !d Press SET button. The clock is set, and then the display moves to the changing the speed and mileage unit.