

## Instruments *(Continued)*

### Display Setting

 
You can adjust the following settings.

- Clock setting
- Changing of the speed and mileage unit


Adjustment will be canceled if the button is not pressed for about 30 seconds, unless each display setting was pre-set individually.

### 1 Clock setting:

- Turn the ignition switch on.
- Press and hold the **SEL** and **SET** buttons until the hour digits start flashing.



 - Press the **SEL** button until the desired hour is displayed.
  - Press and hold the **SEL** button to advance the hour fast.



- Press the **SET** button. The minute digits start flashing.

