










Items		Frequency *1								Refer to page	
		× 1,000 mi × 1,000 km	0.6 1.0	4 6.4	8 12.8	12 19.2	16 25.6	20 32.0	24 38.4		
Emission-Related Items	Fuel Line 				I		I		I	–	
	Throttle Operation 				I		I		I	81	
	Air Cleaner *2					R			R	52, 67	
	Crankcase Breather *3			C	C	C	C	C	C	82	
	Spark Plug		Every 16,000 mi (25,600 km): I Every 32,000 mi (51,200 km): R								58
	Valve Clearance 						I			–	
	Engine Oil		Initial = 600 mi (1,000 km) or 1 month: R Regular = Every 8,000 mi (12,800 km) or 12 months: R								62
	Engine Oil Filter			R		R		R		R	64
	Engine Idle Speed 			I	I	I	I	I	I	I	–
	Radiator Coolant *5				I		I		R	68	
	Cooling System 				I		I		I	–	
	Secondary Air Supply System 				I		I		I	–	
Evaporative Emission Control System *4 					I			I	–		

### Maintenance Level

-  : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (➤ P. 122).
-  : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

### Maintenance Legend

- I** : Inspect (clean, adjust, lubricate, or replace, if necessary)
- C** : Clean
- L** : Lubricate
- R** : Replace