


Stopwatch

To Measure the Time

- 1 Select the stopwatch. **→ P.20**
- 2 To start measurement, press the **SET** button.
 - ▶ The measurement keeps going, if you change an item while measuring.
- 3 To finish measurement, press the **SET** button.
 - ▶ The measurement can also be finished by turning the ignition switch to the OFF position.

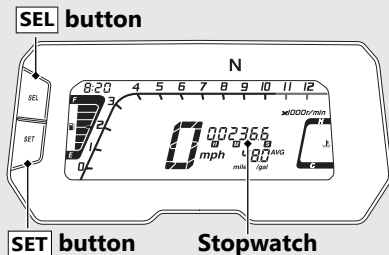

To Restart the Measurement

Press the **SET** button again. The stopwatch restarts measurement.

To Reset the Measured Value

Press and hold the **SEL** button when the stopwatch is displayed and also the measurement is finished.