 


## Instruments *(Continued)*

- 5 Press **SET** button. The minute digits start flashing.



- 6 Press **SEL** button until the desired minute is displayed.  
 ▶ Press and hold **SEL** button to advance the minute quickly.



- 7 Press **SET** button. The clock is set, and then the display moves to the backlight brightness adjustment.

## 2 Backlight brightness adjustment:

You can adjust the brightness to one of five levels.

- 1 Press **SEL** button. The brightness is switched.



- 2 Press **SET** button. The backlight is set, and then the display moves to the changing the speed and mileage unit. The speed and mileage unit will start flashing.