

## 2 Changing of tachometer display mode:

You can change the display mode of the tachometer.

- 1 Press **[SEL]** button to switch the display mode of tachometer.
- 2 Press **[SET]** button. The currently selected display mode is set, and then the display moves to the ordinary display.

### Conventional display

Shows the engine RPM on the tachometer bar segment.

### Peak hold display

Shows the engine RPM on the tachometer bar segment and peak hold segment. The peak hold segment keeps to show the maximum engine RPM temporarily.

Example: Engine revolutions per minutes  
10,500 r/min (rpm)

