

Indicators *(Continued)*

REV Indicator


- Comes on briefly when the ignition switch is turned to the ON position.

Initial setting

Lighting RPM: 8,000 r/min (rpm)

Interval RPM: 250 r/min (rpm)

REV indicator	r/min (rpm)
Blinks (2 times/second)	7,250 r/min (rpm)
Blinks (5 times/second)	7,500 r/min (rpm)
Blinks (10 times/second)	7,750 r/min (rpm)
Solid light	8,000 r/min (rpm)

▶ Setting of REV indicator:  **P.33**