


Battery

Removal

Make sure the ignition switch is in the OFF position.

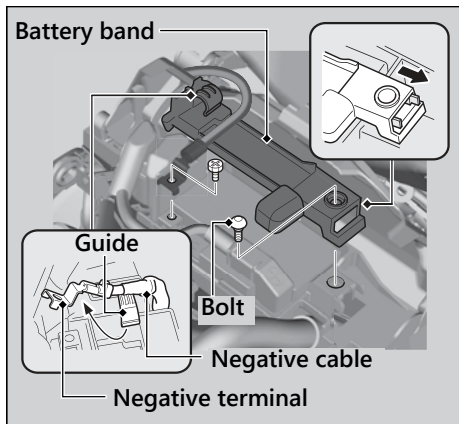

1. Raise the front of the fuel tank. ➤ P. 79
2. Disconnect the negative \ominus terminal from the battery.
3. Remove the negative \ominus cable from the guide.
4. Remove the bolt.
5. Slide the battery band and remove it.