


## Front Seat

### Removal

1. Remove the rear seat. ► P. 81
2. Remove the mounting bolts and collars, and then pull the front seat back and up.

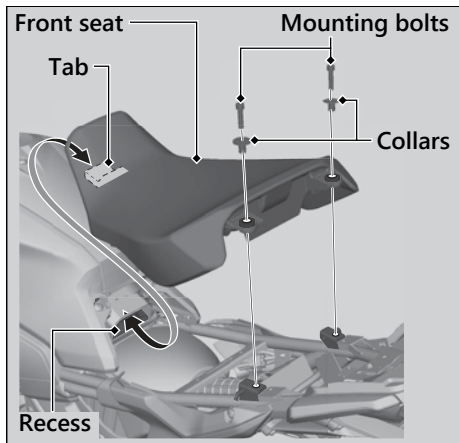

### Installation

1. Insert the tab into the recess.
2. Install the collars and mounting bolts.
3. Tighten the mounting bolts securely.

**Torque:** 7 lbf·ft (10 N·m, 1.0 kgf·m)

- Make sure that the seat is locked securely in position by pulling it up lightly.
4. Install the rear seat. ► P. 81