


Cleaning the Crankcase Breather

1. Place a suitable container to receive deposits.
2. Remove the crankcase breather tube plug from the tube and drain deposits into the container.

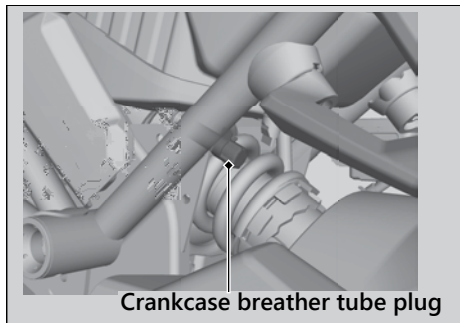

3. Reinstall the crankcase breather tube plug.