

Troubleshooting

Engine Will Not Start	P. 106
Overheating (Segment H flashes in coolant temperature gauge)	P. 107
Warning Indicators On or Flashing	P. 108
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL).....	P. 108
ABS (Anti-lock Brake System) Indicator	P. 109
Other Warning Indications	P. 110
Fuel Gauge Failure Indication.....	P. 110
Tire Puncture	P. 111
Electrical Trouble	P. 118
Battery Goes Dead.....	P. 118
Burned-out Light Bulb	P. 118
Blown Fuse.....	P. 121

Unstable Engine Operation Occurs Intermittently	P. 122
--------------------------------------------------------------	--------