


Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence. ➔ P. 45
- Check that there is gasoline in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
 - ▶ If the indicator lamp is on, contact your dealer as soon as possible.

Starter Motor Does Not Operate

Check the following items:

- Check the correct engine starting sequence. ➔ P. 45
- Make sure engine stop switch is in the  (Run) position. ➔ P. 42
- Check for a blown fuse. ➔ P. 121
- Check for a loose battery connection (➔ P. 73) or battery terminal corrosion (➔ P. 61).
- Check the condition of the battery.
 - ➔ P. 118

If the problem continues, have your motorcycle inspected by your dealer.