

REV indicator



High beam indicator




Left turn signal indicator



N Neutral indicator

Comes on when the transmission is in Neutral.

Right turn signal indicator

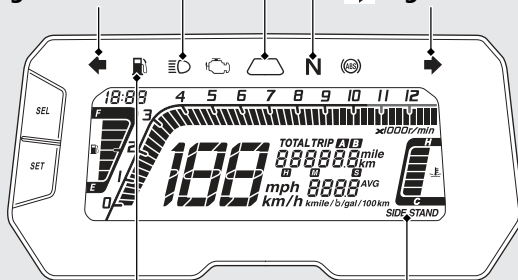

Low fuel indicator

Comes on when there is only reserve fuel left in the fuel tank. Remaining fuel when low fuel indicator comes on: 0.50 US gal (1.9 L)

SIDE STAND indicator

Comes on when the side stand is lowered.