



7. Install a new oil filter with its "OUT-SIDE" mark facing out.
8. Install the oil filter spring into the oil filter cover, and then install the oil filter cover with a new gasket.
9. Install and tighten the oil filter cover bolts.

**Torque:** 9 lbf-ft (12 N·m, 1.2 kgf·m)

10. Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

**Torque:** 18 lbf-ft (24 N·m, 2.4 kgf·m)

11. Fill the crankcase with the recommended oil (► P. 64, ► P. 148) and install the oil fill cap.

**Required oil**

**When changing oil & engine oil filter:**

1.6 US qt (1.5 L)

**When changing oil only:**

1.5 US qt (1.4 L)

12. Check the oil level. ► P. 84

13. Check that there are no oil leaks.

**NOTICE**

Improper installation of the oil filter can result in serious damage to the engine.