











Items		Frequency*1								Regular Replace	Refer to page	
		x 1,000 mi	0.6	4	8	12	16	20	24			
		x 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4			
Emission-Related Items	Fuel Line				I		I		I		-	
	Throttle Operation				I		I		I		82	
	Air Cleaner*2					R			R		68	
	Crankcase Breather*3			C	C	C	C	C	C		83	
	Spark Plug						R				-	
	Valve Clearance						I				-	
	Engine Oil			R		R		R		R	1 Year	66
	Engine Oil Filter			R				R				66
	Engine Idle Speed					I		I		I		-
	Radiator Coolant*5					I		I		I	3 Years	69
	Cooling System					I		I		I		-
	Secondary Air Supply System							I				-
Evaporative Emission Control System*4							I				-	

### Maintenance Level

-  : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (➤ P. 122).
-  : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

### Maintenance Legend

- I** : Inspect (clean, adjust, lubricate, or replace, if necessary)
- R** : Replace
- L** : Lubricate
- C** : Clean