


## Blown Fuse

Before handling fuses, see “Inspecting and Replacing Fuses.” ► P. 51

### ■ Fuse Box Fuses

1. Remove the front seat. ► P. 62
2. Remove the fuse box covers.
3. Pull the fuses out one by one with the fuse puller in the tool kit and check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
4. Reinstall the fuse box covers.
5. Reinstall the front seat.

CB500F

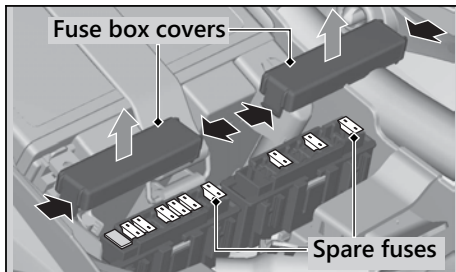

CB500FA

