

Troubleshooting

Engine Will Not Start	P. 90	Blown Fuse.....	P. 105
Overheating (High coolant temperature indicator is on)	P. 91		
Warning Indicators On or Flashing	P. 92		
Low Oil Pressure Indicator	P. 92		
PGM-FI (Programmed Fuel Injection)			
Malfunction Indicator Lamp (MIL).....	P. 92		
ABS (Anti-lock Brake System) Indicator	P. 93		
Other Warning Indications	P. 94		
Fuel Gauge Failure Indication.....	P. 94		
Tire Puncture	P. 95		
Electrical Trouble	P. 102		
Battery Goes Dead.....	P. 102		
Burned-out Light Bulb	P. 102		