

Maintenance

Please read “Importance of Maintenance” and “Maintenance Fundamentals” carefully before attempting any maintenance. Refer to “Specifications” for service data.

An optional larger tool kit may be available.
Check with your Honda dealer's parts department.

| | | | |
|---|-------|--------------------------------------|--------|
| Importance of Maintenance | P. 58 | Side Stand | P. 94 |
| Maintenance Schedule | P. 60 | Drive Chain | P. 95 |
| Maintenance Record | P. 63 | Clutch | P. 99 |
| Maintenance Fundamentals | P. 64 | Throttle | P. 102 |
| Removing & Installing Body Components .. | P. 78 | Crankcase Breather | P. 103 |
| Battery | P. 78 | Other Adjustments | P. 104 |
| Clip | P. 79 | Adjusting the Headlight Aim..... | P. 104 |
| Front Seat | P. 80 | Adjusting the Brake Lever..... | P. 105 |
| Rear Seat | P. 81 | Adjusting the Front Suspension | P. 106 |
| Left Side Cover..... | P. 82 | Adjusting the Rear Suspension..... | P. 107 |
| Engine Oil | P. 83 | | |
| Air Cleaner | P. 87 | | |
| Coolant | P. 89 | | |
| Brakes | P. 91 | | |