



Instruments *(Continued)*

Display Setting

Press the SEL button to cycle through the setting choices.

- Clock setting
- Backlight brightness adjustment
- Activating/deactivating of tripmeter A, average fuel mileage and fuel consumption automatic reset mode
- Changing of speed and mileage unit
- Changing of fuel mileage meter unit (only when km unit system is selected)

 Press and hold SEL button and SET button

 Press SET button

