- **5.** Remove the rear axle shaft, washer, brake caliper bracket, rear wheel and side collars.
  - Support the brake caliper assembly so that it doesn't hang from the brake hose. Do not twist the brake hose.
  - Avoid getting grease, oil, or dirt on the disc to pad surfaces.
  - ► Do not push the brake pedal while the wheel is removed.

## Installation

- **1.** To install the rear wheel, reverse the removal procedure.
  - Take care to prevent the brake caliper from scratching the wheel during installation.

## NOTICE

When installing the brake caliper into position, carefully fit the brake disc between the pads to avoid scratching them.