

Troubleshooting

Engine Will Not Start	P. 88	Other Warning Indication	P. 92
Overheating (High coolant temperature indicator is on)	P. 89	Fuel Gauge Failure Indication.....	P. 92
Warning Indicators On or Flashing	P. 90	Tire Puncture	P. 93
Low Oil Pressure Indicator	P. 90	Electrical Trouble	P. 100
PGM-FI (Programmed Fuel Injection)		Battery Goes Dead	P. 100
Malfunction Indicator Lamp (MIL).....	P. 90	Burned-out Light Bulb	P. 100
ABS (Anti-lock Brake System) Indicator.....	P. 91	Blown Fuse.....	P. 105