

<b>Engine</b>	
Number .....	116
Oil.....	51, 63
Oil Filter .....	65
Overheats .....	89
Starting.....	34
Stop Switch.....	32, 34, 109
Stopping .....	109
<b>Environment.....</b>	<b>115</b>
<b>Equipment</b>	
Owner's Manual .....	38
Tool Kit .....	38
<b>F</b>	
<b>Flooded Engine.....</b>	<b>34</b>
<b>Fuel</b>	
Consumption Meter.....	20
Gauge.....	19
Mileage Meter .....	20
Oxygenated .....	123
Recommended .....	36
Remaining.....	19
Tank Capacity .....	36
<b>Fuses.....</b>	<b>50, 105</b>
<b>G</b>	
Gasohol .....	123
Gasoline .....	36
<b>H</b>	
Hazard Switch.....	32
Headlight Aim .....	83
Headlight Dimmer Switch.....	32
Helmet Holder .....	37
High Beam Indicator .....	31
High Coolant Temperature Indicator .....	30, 89
Honda Contacts.....	127
Horn Button.....	32
<b>I</b>	
Ignition Cut-off System	
Banking Sensor.....	109
Side Stand .....	73
Ignition Key .....	108
Ignition Switch .....	33, 109