

# Maintenance Schedule

Items		Frequency *1								Regular Replace	Refer to page
		× 1,000 mi	0.6	4	8	12	16	20	24		
		× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4		
Emission-Related Items	Fuel Line	🔧			I		I		I		–
	Throttle Operation	🔧			I		I		I		99
	Air Cleaner *2					R			R		84
	Crankcase Breather *3			C	C	C	C	C	C		100
	Spark Plug	🔧					R				–
	Valve Clearance	🔧					I				–
	Engine Oil		R		R		R		R	1 Year	80
	Engine Oil Filter		R				R				80
	Engine Idle Speed	🔧			I		I		I		–
	Radiator Coolant *5				I		I		I	3 Years	86
	Cooling System	🔧			I		I		I		–
	Secondary Air Supply System	🔧					I				–
	Evaporative Emission Control System *4	🔧					I				–

## Maintenance Level

- 🔧 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (➡ P. 144).
- 🔧 : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

## Maintenance Legend

- I : Inspect (clean, adjust, lubricate, or replace, if necessary)
- L : Lubricate
- R : Replace
- C : Clean