

---

 **Torque Control indicator**

- Comes on when the ignition switch is turned to the ON position. Goes off when your speed reaches approximately 3 mph (5 km/h) to indicate Torque Control is ready to work.
- Blinks when Torque Control is operating.

**If it comes on while riding:**  **P.109**

---

 **Torque Control OFF Indicator**

- Comes on when the Torque Control is turned Off.

---

 **High beam indicator**

---

 **Neutral indicator**

Comes on when the transmission is in Neutral.