



Items	Frequency *1								Regular Replace	Refer to page
	× 1,000 mi	0.6	4	8	12	16	20	24		
	× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4		
Fuel Line				I		I		I		-
Throttle Operation				I		I		I		100
Air Cleaner *2					R			R		79
Spark Plug		Every 16,000 mi (25,600 km) : I Every 32,000 mi (51,200 km) : R								-
Valve Clearance								I		-
Engine Oil		R		R		R		R	1 Year	85
Engine Oil Filter		R				R				85
Engine Idle Speed				I		I		I		-
Radiator Coolant *4				I		I		I	3 Years	87
Cooling System				I		I		I		-
Secondary Air Supply System						I				-
Evaporative Emission Control System *3						I				-

### Maintenance Level

-  : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (P. 142).
-  : Technical. In the interest of safety, have your vehicle serviced by your dealer.

### Maintenance Legend

- I** : Inspect (clean, adjust, lubricate, or replace, if necessary)
- L** : Lubricate
- R** : Replace