
## **Instruments** (Continued)

To reset the tripmeter B, average fuel mileage B, fuel consumption B, average speed B and and elapsed time B (these are based on tripmeter B) together, press and hold the **SET** button while tripmeter B is displayed.

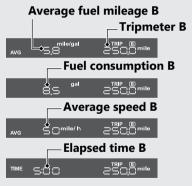

When they are reset, reset display appears at each indication. Then, the display returns to the last selected indication.

