



Items		Frequency *1								Regular Replace	Refer to page		
		× 1,000 mi	0.6	4	8	12	16	20	24				
		× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4				
Emission-Related Items	Fuel Line				I		I		I			-	
	Throttle Operation				I		I		I			100	
	Air Cleaner *2					R			R			79	
	Spark Plug		Every 16,000 mi (25,600 km) : I, Every 32,000 mi (51,200 km) : R										-
	Valve Clearance								I			-	
	Engine Oil		R		R		R		R	1 Year		85	
	Engine Oil Filter		R				R					85	
	Engine Idle Speed				I		I		I			-	
	Radiator Coolant *4				I		I		I	3 Years		87	
	Cooling System				I		I		I			-	
	Secondary Air Supply System						I					-	
	Evaporative Emission Control System *3						I					-	

## Maintenance Level

 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (P. 143).

 : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

## Maintenance Legend

**I** : Inspect (clean, adjust, lubricate, or replace, if necessary)

**L** : Lubricate

**R** : Replace