

Engine

Number	136
Oil	72, 83
Oil Filter	85
Overheats	106
Starting	54
Stop Switch	50, 54, 128
Stopping	128
Will Not Start	105

Environment	135
--------------------------	-----

Equipment

Owner's Manual	58, 128
Tool Kit	57

F

Flooded Engine	54
-----------------------------	----

Fuel

Average Fuel Mileage Meter	22
Consumption Meter	23
Current Fuel Mileage Meter	22
Gauge	20
Recommended	56
Remaining	20
Reserve Fuel Consumption	24

Tank Capacity	56
Fuses	71, 124

G

Gasohol	142
Gasoline	56
Gear Position Indicator	20

H

Hazard Switch	50
Headlight Aim	101
Headlight Dimmer Switch	50
Helmet Holder	57
High Beam Indicator	45
Honda Contacts	146
Honda selectable torque control	53
Horn Button	50

I**Ignition Cut-off System**

Banking Sensor	129
Side Stand	92
Ignition Key	127
Ignition Switch	51, 54, 128