

## Gauges, Indicators & Displays

---

10	right turn signal indicator (green)	Flashes when the right turn signal operates. <i>Lamp Check.</i>
11	warning indicator (red)	Lights when coolant is over the specified temperature, and/or engine oil pressure is below normal operating range. If the indicator lights, pull safely to the side of the road. (pages 30 – 31 ). <i>Lamp Check.</i> See pages 210 – 212 for instructions and cautions.