

Gauges, Indicators & Displays


Low Oil Pressure Indicator and Warning Indicator

The low oil pressure indicator (1) and the warning indicator (2) light when engine oil pressure is low enough to cause engine damage.

The low oil pressure indicator and warning indicator should also light when the ignition switch is turned ON. The warning indicator and the low oil pressure indicator stay on until after the engine is started.

If the low oil pressure indicator and the warning indicator light, pull safely to the side of the road.

See page 212 for instructions and cautions.

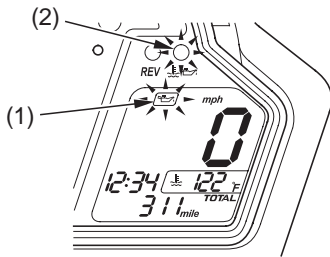

(1) low oil pressure indicator

(2) warning indicator