

Fuel Mileage Meter


The fuel mileage meter includes the following functions:

- current fuel mileage
- average fuel mileage
- fuel consumption

The unit of the indication depends on the unit which you select (page 40).

If the speed and mileage unit is set to “km/h”/“km,” the indication mode of the current and average fuel mileage can be selected km/l or l/100 km (page 42).

When the odometer (5) or tripmeter A (6) is displayed, press control button B (7) to select any mode of the fuel mileage meter. Press control button A (8) to change the indication to the odometer or tripmeter A.

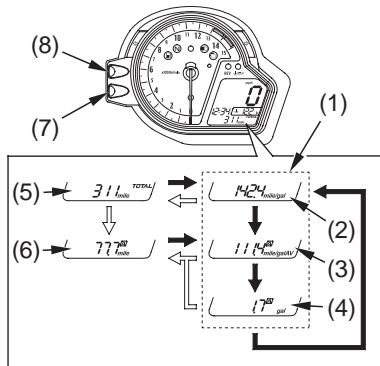

⇨ :press control button A

➔ :press control button B

- | | |
|--------------------------|----------------------|
| (1) fuel mileage meter | (5) odometer |
| (2) current fuel mileage | (6) tripmeter A |
| (3) average fuel mileage | (7) control button B |
| (4) fuel consumption | (8) control button A |
- (cont'd)