

# Gauges, Indicators & Displays

## Changing the Speed, Mileage and Fuel Mileage Unit

The speedometer can display “mph” or “km/h.”

The odometer/tripmeter can also display “mile” or “km.”

The fuel mileage meter can display “mile/gal”/“gal” or “km/l”/“l/100 km”/“l.”

1. Turn the ignition switch ON.
2. Press and hold both control button A (1) and control button B (2) for more than 2 seconds.


The unit you are setting in the multi-function display starts to blink.

3. Press control button A to select “mile”/“mph”/“gal” or “km”/“km/h”/“l.”

4. To end the selection, press control button B.

The display will stop blinking automatically if the button is not pressed for about 30 seconds.

As you turn off the ignition switch during the presetting procedures, the preset data just before turning off the ignition switch will be registered.

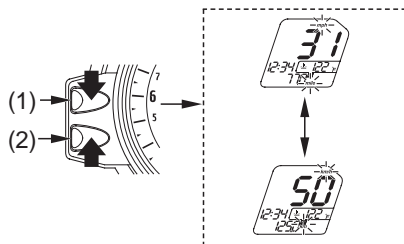

(1) control button A (2) control button B