

Changing the Temperature Unit

This function can be operated after the speed, mileage, and fuel mileage unit change mode (page 40).


The coolant temperature meter displays both “°F” (Fahrenheit) and “°C” (Centigrade).

Press control button A (1) to select “°F” or “°C.”

To end the selection, press control button B (2).

The display will stop blinking automatically if the button is not pressed for about 30 seconds.

As you turn off the ignition switch during the presetting procedures, the preset data just before turning off the ignition switch will be registered.

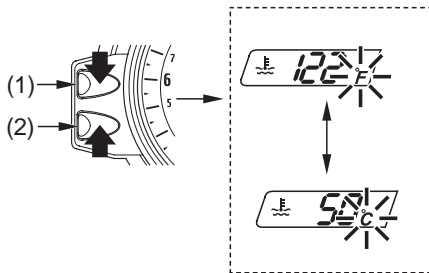

(1) control button A

(2) control button B