


Gauges, Indicators & Displays

To select the indicator display:

You may choose from 9 different indicator displays (page 48).

Press control button A (1) repeatedly to view available displays.

Once you reach the display you want, press control button B (2). Then turn off the ignition switch to register your selection.

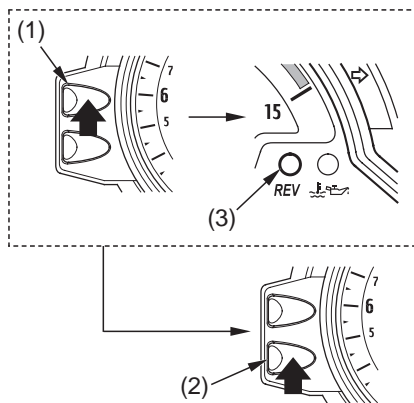

- (1) control button A
- (2) control button B
- (3) shift indicator