Is Your Motorcycle Ready to Ride?

Leaks, Walk around your
Loose motorcycle and look for
Parts anything that appears

unusual, such as a leak or

loose cable.

Lights Make sure the headlight,

running light, brakelight, taillight, license light and turn signals are working

properly.

If you are carrying a passenger or cargo, also check the following:

Load Limits Make sure you do not

exceed the load limits

(page 63).

Cargo Check that all cargo is

secure.

Adjustments Adjust the suspension

(pages 136, 140)

according to your load.