

## Periodic Maintenance

<i>Tires &amp; Wheels</i>	Check the air pressure with a gauge and add air if needed (page 150 ). Examine the tread for wear (page 152 ). Look closely for nails, embedded objects, cuts, and other types of damage (page 152 ). Roll your motorcycle so you can inspect the entire surface. Check the condition of the wheels.
Fluids	Check the levels of the engine oil (page 119 ), coolant (page 126 ), and brake fluid (page 146 ). Add the correct fluid as necessary, and investigate the cause of any low fluid level.
Lights	Make sure the headlight, running light, brakelight, taillight, license light and turn signals are working properly.
Freeplay	Check the freeplay of the clutch lever (page 131 ) and throttle grip (page 129 ).
Drive Chain	Check condition, adjust slack, and lubricate as needed (page 160 ).
Fuses	Make sure you have a full supply of spare fuses.
Nuts & Bolts	Check the major fasteners and tighten as needed.