

Lower Cowl Removal

Refer to *Safety Precautions* on page 92 .


The lower cowl must be removed to adjust the clutch lever freeplay and to change the oil filter.

Removal

1. Remove the bolts A (1) and bolts B (2).
2. Remove the lower cowl (3) carefully in the procedure shown in the illustration, then pull out the tubes (4).

Installation

- Installation can be done in the reverse order of removal.
- Route the tubes through the opening of the lower cowl.

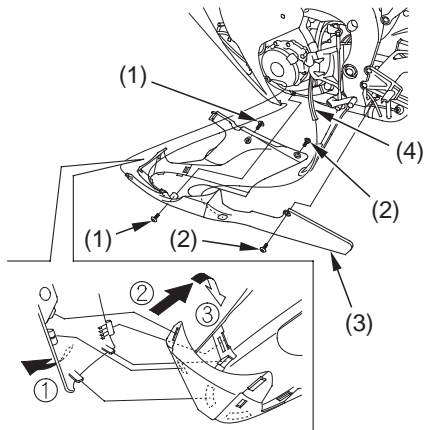

(1) bolts A
(2) bolts B

(3) lower cowl
(4) tubes