Engine Oil & Filter

- 7. Remove the dipstick and check the oil level.
 - If the oil is at or near the upper level mark (2) you do not have to add oil.
 - If the oil is below or near the lower level mark (3) — remove the oil filler cap (4) and add the recommended oil until it reaches the upper level mark. (Do not overfill.)
- 8. Reinstall the oil filler cap.
- 9. Reinstall the dipstick.
- 10. Check for oil leaks.

Changing Engine Oil & Filter

Refer to Safety Precautions on page 92.

Your motorcycle's oil filter has very specific performance requirements. Use a new Honda Genuine oil filter or a filter of equal quality specified for your model.

NOTICE

Using the wrong oil filter may result in leaks or engine damage.