
If a Fuse Blows

ABS motor fuses: (CBR1000RR ABS only)

The ABS motor fuses (11) are located on the starter magnetic switch.

To replace these fuses, the fuel tank must be removed.

The ABS motor fuses should be inspected by a Honda dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to an official Honda Service Manual.

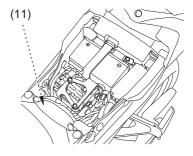

(11) ABS motor fuses