
### Instruments (Continued)

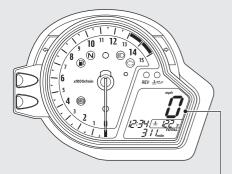

## High coolant temperature indicator

Comes on briefly when the ignition switch is turned ON.

If it comes ON while riding:

### Comes on briefly when the ignition switch is turned ON.

**Damper**) indicator

### If it comes ON while engine is running:

**HESD (Honda Electronic Steering** 



HESD

# Comes on when the ignition switch is turned ON. Goes off when the

engine starts.

Clock (12-hour display)

To set the clock: P.25

If it comes ON while engine is

running: P.87



⊂→ P.86